

What is the **Working Range**?

Each platform of the EZcarlift is 10 inch (25cm) wide. The middle 6 inches (15cm) of the platform is utilized for lifting of a vehicle. This is what we consider the working range of the lift (platform)

For an example, the xm40 - a Cross Spacer, also called Cross Bar, with overall length of 40" (102cm) will accommodate vehicles with jacking points width in the range of 26 to 38 inch (66 to 96cm).



Below is a chart of the working range for all available standard and custom cross spacer:

Cross Spacer #	Range in inch	Range in centimeters
xm40-2638	from 26" to 38"	from 66cm to 96cm
xm52-3850	from 38" to 50"	from 97cm to 127cm
xm64-5062	from 50" to 62"	from 128cm to 157cm
xm74-6072	from 60" to 72"	from 158cm to 183cm
Custom space bars*		
xmC37-2335	from 23" to 37"	from 58cm to 90cm
xmC45-3143	from 31" to 43"	from 78cm to 110cm
xmC59-4557	from 45" to 57"	from 114cm to 145cm
xmC69-5567	from 55" to 67"	from 140cm to 170cm

*Custom Space bars - are in house modified standard spacers to change the working range to a new range. In many cases it may eliminate the need of purchasing a second set of spacers or provide a better fit to a specific vehicle

The length of the jacking points - front to back dimensions of the jacking points, are accommodated by the infinitely adjustable rubber pads from 6" (15cm) to 59" (150cm). For jacking points longer than 59" (150cm) we do have an [optional Ramp Extensions](#), adjustable in 3" (8cm) increments